


**Product Name :**  
Static Cone Penetrometer Hand Operated

**Product Code :**  
TEST5028RFQLAB-0001

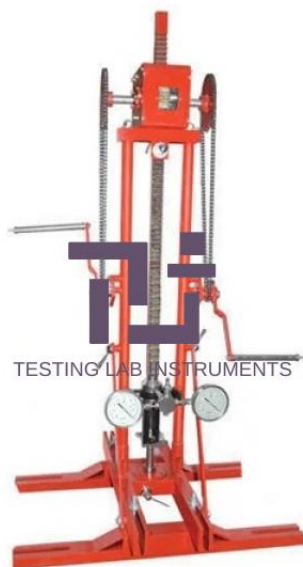

**Description :**

Static Cone Penetrometer, Hand Operated, 30 kN (3000 kgf.) Capacity for Testing Lab Equipment Tender Suppliers India

**Technical Specification :**

The unit incorporates a two speed geared drive assembly and is provided with two handles for ease of operation. The essential features are a frame to which is mounted a two column structure. The cross head carries the winch mechanism with a pinion driving a long travel geared rack.

The unit is supplied complete with:

Screw type anchors for reaction complete with fixtures. 4 Nos.

Mantle tubes one meter long with conical threads, 36 mm non-uniform diameter -15 Nos.

Sounding rods, one meter long 15 Nos.

Pressure Gauges, 150 mm dia 0-60 & 160 kgf/cm<sup>2</sup> – 1 No. each

Cone with friction jacket 10 cm<sup>2</sup> base area – 1 No.

Cone without friction jacket 10 cm<sup>2</sup> base area – 1 No.

Set of tools for the unit – 1 set.

Automatic cut-off device for pressure Gauge – 1 No.

We are a leading manufacturers of Static Cone Penetrometer Hand Operated testing equipment for a range of industries, including materials science testing lab. We offer full range of Static Cone Penetrometer Hand Operated testing equipment, including Static Cone Penetrometer Hand Operated testing kit, Static Cone Penetrometer Hand Operated testing machine, Static Cone Penetrometer Hand Operated testing tools, Static Cone Penetrometer Hand Operated test equipment, Static Cone Penetrometer Hand Operated test machines,

---

Static Cone Penetrometer Hand Operated for Lab Testing Instruments. We are suppliers of materials testing tools and equipment for the construction industry. Our mission is to provide reliable, accurate, and easy-to-use Static Cone Penetrometer Hand Operated testing equipment that helps customers build better, safer, and more sustainable infrastructure.



**Testing lab instruments India**